




Magnet Pocket Install on Top Flap

Using a single needle with E thread follow the numbered stitch pattern shown in the drawing. Be careful to sew only through the Type 3 pocket and top flap and no other panels or parts.

The top of the pocket will remain open and the magnet is slid into the pocket after sewing.

Inspect both sides of stitch before returning to service.

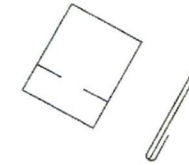

Cut Type 3 1 Inch at 3 Inches

Mark at 3/8 Inch

